Parts4Marx Tech Tips

001

Replacing a Smoke Element

To replace the smoke element:

- 1. Remove the motor from the shell.
- 2. Use a soldering gun and remove the headlight wire.
- 3. Remove the front truck and support bracket.
- 4. Remove bottom slide clip.
- 5. Use a soldering gun and disconnect the power wire.
- 6. Remove the smoke unit.
- 7. Carefully pry the sides apart.
- 8. Replace the element; one side is ground, the other side needs to be insulated.
- 9. Use Permatex # 1 as a sealant, and reassemble the smoke unit.
- 10. There will be enough of the posts left to crimp over again, use parallel pliers.
- 11. Extend the wiring, as necessary.
- 12. Reassemble the engine.